


ASUS SpaceLink PC Card

WL-100

Quick Start Guide

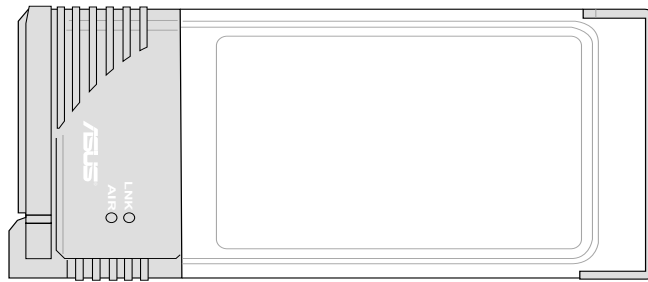

Copyright Information

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Copyright © 2002 ASUSTeK COMPUTER INC. All Rights Reserved.

Product Name:	ASUS SpaceLink PC Card (WL-100)
Manual Revision:	1.00 E1039
Release Date:	May 2002

Copyright Information

ASUSTeK COMPUTER INC. (Asia-Pacific)

Address: 150 Li-Te Road, Peitou, Taipei, Taiwan 112
General Tel: +886-2-2894-3447
General Fax: +886-2-2894-3449
General Email: info@asus.com.tw

Technical Support

MB/Others (Tel): +886-2-2890-7121 (English)
Notebook (Tel): +886-2-2890-7122 (English)
Desktop/Server (Tel): +886-2-2890-7123 (English)
Support Fax: +886-2-2890-7698
Support Email: tsd@asus.com.tw
Web Site: www.asus.com.tw
Newsgroup: cscnews.asus.com.tw

ASUS COMPUTER INTERNATIONAL (America)

Address: 6737 Mowry Avenue, Mowry Business Center,
Building 2, Newark, CA 94560, USA
General Fax: +1-510-608-4555
General Email: tmd1@asus.com

Technical Support

Support Fax: +1-510-608-4555
Notebook (Tel): 1-877-918-ASUS (2787)
Web Site: www.asus.com
Support Email: tsd@asus.com

ASUS COMPUTER GmbH (Europe)

Address: Harkortstr. 25, 40880 Ratingen, BRD, Germany
General Fax: +49-2102-442066
General Email: sales@asuscom.de (for marketing requests only)

Technical Support


Support Hotline: MB/Others: +49-2102-9599-0
Notebook (Tel): +49-2102-9599-10
Support Fax: +49-2102-9599-11
Support (Email): www.asuscom.de/de/support (for online support)
Web Site: www.asuscom.de

Installation

Installing the SpaceLink PC Card Driver

1. Turn ON your computer and enter Windows.
2. Insert the ASUS SpaceLink PC Card into a PCMCIA Type II slot with the connector side first. The “LNK” and “AIR” LEDs represent the top side and the “MAC” address sticker represents the bottom side. Push the PC Card into the slot until it is firmly seated.

CAUTION: Make sure that you carefully align the ASUS SpaceLink PC Card into the PC Card socket. Forcing a misaligned PC Card will damage the PC Card or the computer.

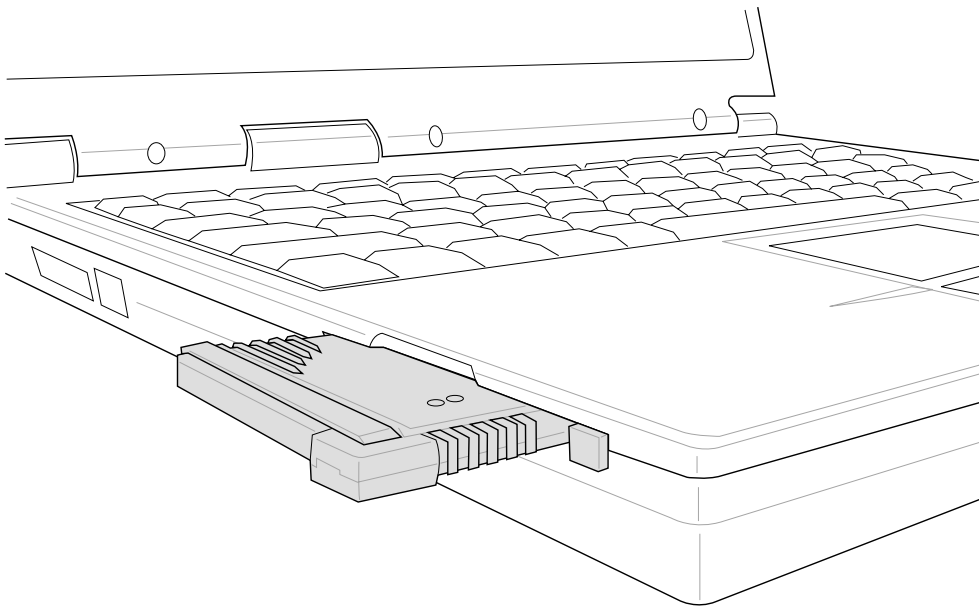

3. Windows will automatically detect the ASUS SpaceLink PC Card once it is inserted into the PCMCIA slot, then the “Add New Hardware Wizard” dialog will appear. Click **Next**.
4. Select “Search for the best driver for your device (Recommended)”. Click **Next**.
5. Specify the location of the drivers for your operation system. Click **Next**.
Windows 98: [CD]:\Driver\Win98
Windows Me: [CD]:\Driver\WinMe
Windows 2000: [CD]:\Driver\Win2K
Windows XP: [CD]:\Driver\WinXP
Where [CD] represents the driver letter of your CD-ROM drive.

6. Wait while Windows searches for the device driver for the PC Card. It will display the search result: “ASUS SpaceLink WL-100 WLAN PC Card”. Click **Next**.
7. During the installation, Windows may prompt you to insert the “Windows Operating System CD” which contains some driver files. Insert your Windows setup disc and type the path if necessary and click **Yes**. Windows will start copying the necessary files.
8. When the installation procedure is completed, click **Finish**.
9. When prompted, reboot your computer.

Verifying the SpaceLink PC Card Installation

Windows 98/Me

Right-click **My Computer** on the desktop and select **Properties**. Click **Device Manager** and look under **Network adapters**. If you find the “ASUS SpaceLink WL-100 WLAN PC Card” string, it means the PC Card is installed correctly.

Windows 2K/XP

Open the **Control Panel** through the **Start** menu. Double-click **System** icon. Click **Device Manager** on the “Hardware” page. Click **Network adapters**. If you find the “ASUS SpaceLink WL-100 WLAN PC Card” string, it means the PC Card is installed correctly.

Verifying the TCP/IP Protocol

Windows 98/Me

Right-click **My Network Places** on the desktop and select **Properties**. Scroll down and look for “TCP/IP -> ASUS SpaceLink WL-100 WLAN PC Card”. Make sure that the TCP/IP protocol parameters (IP address, gateway, and subnet mask) are set correctly.

Windows 2K/XP

Open the **Control Panel** through the **Start** menu. Double-click **Network Connection** icon. Right click “ASUS SpaceLink WL-100 WLAN PC Card” and select **Properties**. Look for “Internet Protocol (TCP/IP)”. Make sure that the TCP/IP protocol parameters (IP address, gateway, and subnet mask) are set correctly.

Installation


Installing the SpaceLink PC Card Utilities

After you have installed the PC Card driver, you can install the WLAN Card utilities. Refer to the User's Manual for the detailed information.

1. Insert the ASUS SpaceLink PC Card support CD and an autorun menu will appear. If your autorun is disabled, double click **SETUP.EXE** in the root directory of the support CD.
2. From the autorun menu, click Install **ASUS WLAN Card Utilities**.
3. Follow the on-screen instructions to complete the installation.

Reading the SpaceLink PC Card LEDs

The part of the ASUS SpaceLink PC Card that protrudes out of the PCMCIA socket consists of two LEDs that indicate the status of the ASUS SpaceLink PC Card.

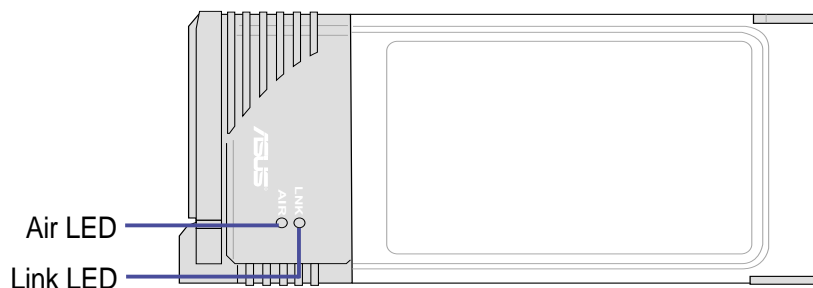

Air LED

The Air LED indicates that there are packets being transmitted.

Link LED

The Link LED is used to indicate the status of the ASUS SpaceLink PC Card. These are the following link statuses:

Solid Green: The ASUS SpaceLink PC Card is associated with an Access Point.

Blinking: The SpaceLink PC Card is attempting to associate with an Access Point.

Off: There are errors during the Power-ON Self-Test.

Orientating the Antenna

The ASUS SpaceLink PC Card has two integrated antennas, one external omnidirectional antenna and the other is a built-in diversity antenna. It is recommended that you adjust the external antenna straight up for maximum range and higher link quality. Lower the external antenna when transporting your Notebook PC.